



Installation and Operational Instructions for SunBriteTV Model 2310HD Model SB-FMT23

SunBriteTV RadioFM™ transmits the audio from SunBriteTV to your FM radio. The SunBriteTV should be installed within 40 feet from your FM radio.

The SunBriteTV RadioFM Kit™ includes an FM Transmitter with Input Cables, Antenna Wire and Power Tap Cable (Note: The colors of the transmitter and/or cables may differ from examples.)

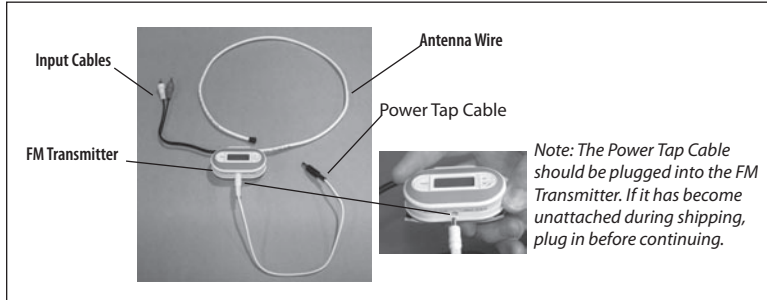


Figure 1

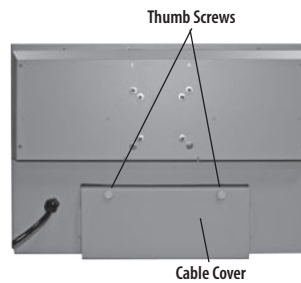


Figure 2




Figure 3



SunBriteTV RadioFM Kit does not include the FM radio.

1. Unscrew all Thumb Screws, and pull the top of the Cable Cover forward (Figure 1).
2. Locate the Audio Out and TV Power Connector (Figures 2 and 3).
3. Connect the FM Transmitter Audio Input Cables to the Analog Audio Line Out on the TV
The red input jack connects to the red Analog Audio Out, and the white input jack connects to the white Analog Audio Out. (Figure 4).
4. Connect the male Input Power Tap Cable to the TV's Power Connector (Figure 4)
5. Connect the Source Cables to the proper inputs (Figure 5). See the Input Connections section in the SunBriteTV Operator's Manual for complete details.
Note: In order for RadioFM to function, the Audio Cable must be connected.

Figure 4

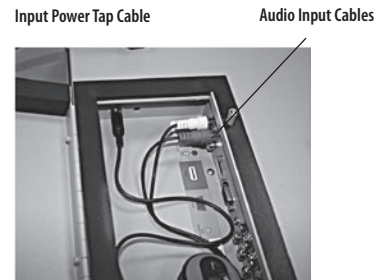

6. Turning the Radio FM On

Auto On

The system has an "Auto On/Off" feature that powers on the FM Transmitter when it detects an input signal. The "Auto On/Off" feature uses the TV's volume level to automatically power on and off.

For best results, keep your TV at a medium volume level. Note: Setting your TV volume very low may cause the FM Transmitter to turn off, even if the TV is on.

Manual On

You can also press and hold both ▲ and ▼ buttons simultaneously for two seconds to turn on the FM Transmitter manually. To turn off the FM Transmitter, press and hold both buttons simultaneously again for two seconds.

Note: To conserve power, the FM Transmitter will automatically turn off when there is no input audio signal for 60 seconds +/- 10 seconds.

7. Tune the FM radio

The FM Transmitter has been factory set at 105.7 FM (Figure 6). Turn on your FM radio, and tune it to 105.7 FM.

The sound from the TV should now be heard on your FM radio. The sound should be clear, with no interference.

If you are receiving interference on the 105.7 FM station, you may need to tune to a different station, which you can do from the FM Transmitter.

To increase frequency, press the ▲ button on the FM Transmitter.

To decrease frequency, press the ▼ button on the FM Transmitter.

The stereo indicator on your FM radio will light when tuned properly.

Figure 6



Instructions continue on back page

SunBriteTV RadioFM Installation and Operational Instructions (continued)

8. Mount the FM Transmitter to the TV

When you are satisfied with the radio reception, you can mount the FM Transmitter to the TV. Remove the tape-protector from the velcro on the bottom of the FM Transmitter (Figure 7). Place the FM Transmitter firmly on the inside of the Cable Cover (Figure 8). Drape the Antenna and the Source Cables over the Rubber Sealing Gasket (Figure 8).

9. Close Cable Cover

Press firmly down on the Cable Cover to compress the Rubber Sealing Gasket, as you tighten the Tumb Screws (Figure 9).

Figure 7



Figure 8

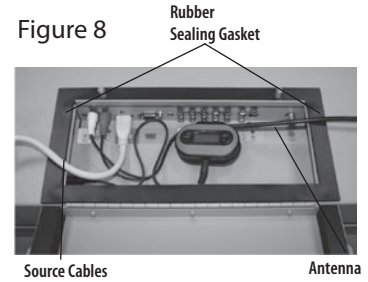


Figure 9

